

 **DIRECT ORDER BLINDS**

# *How to measure for* Perfect Fit Shutters




[www.directorderblinds.co.uk](http://www.directorderblinds.co.uk) | 01205 601115 | [sales@directorderblinds.co.uk](mailto:sales@directorderblinds.co.uk)

## Getting Measurements

Using a steel tape measure, measure the visible glass size. Take 3 measurements from the bottom, middle, and top of the glass size width and make a note of the smallest measurement accurate to the nearest millimeter.

Do the same for the glass size drop, taking measurements from the left, middle, and right of the glass drop and making a note of the smallest measurement to the nearest millimeter.

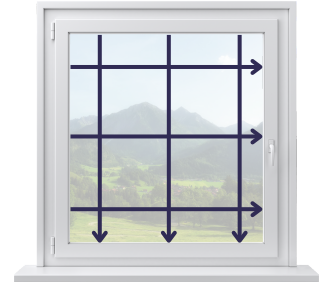

## Bead Depth

Bead depth gives you the measurement from the **face of the window frame to the glass**.

If you do not have a depth gauge, you can also do this by putting a straight edge across the corner of your window and then measuring down to the glass. Something like a credit card will work.



## Handle Location

For windows with handles, you will need to measure the location for the rebate.

Handle at the **Bottom** - Take a measurement from the left-hand side of the visible glass to the centre of the handle's base plate.

Handle on the **Left or Right** - Take a measurement from the bottom of the visible glass to the centre of the handle's base plate.

